

# Operating Digital LED Signs

[www.digital-led-signs.com](http://www.digital-led-signs.com)

## Remote Control Operation & Instructions:

### Quick Start Guide – Pre Install Sets

#### Step 1: Plug sign into power point correctly. Message S (Preset Message)

Using Remote Control > Press Menu Key > Use Prev or Next to select - 2. Edit Files > Enter > Type Capital **N** > Press Enter once > Type your Name > Enter > Save (Y/N)? Press Y > Esc, Esc... until sign plays.

---Your Sign will Play & Repeat Sign Size, Web Address and Your Name.

#### Step 2:

Using Remote Control > Press Menu Key > Use Prev or Next to select - 1. Edit Run Sequence > Enter > Type Capital **Q** (Q Preset Message) > Enter > Save (Y/N)? Press Y > Esc, Esc until your sign plays.

---Your Sign will Play & Repeat Sign Size, Web Address, Your Name & Thank You message.

**Step1 is a Message, Step2 is a Sequence.**

#### Step 3:

Using Remote Control > Press Menu Key > Use Prev or Next to select - 2. Edit Files > Enter > Type Capital **A** > Enter > Sign Shows **Page 001**, Jumps to blank screen.> Type your Full Address (e.g. 26 Commercial Drive, Lynbrook, 3975, Australia) > Enter > Save (Y/N)? Press Y to Save > Esc, Esc... until sign plays. (Please Note: You will need to Edit Sequence to play the Address, Follow the step below to edit the Sequence)

Using Remote Control, Press Menu Key > Use Prev or Next to select - 1. Edit Run Sequence > Enter > Press DEL, DEL... to clear screen.

Type Capital **A** > Enter> Save (Y/N)? Press Y to Save> Esc, Esc... until sign plays.

---Your Sign will Play & Repeat your Full Address only.

#### **Step 4:**

Using Remote Control, Press Menu Key > Use Prev or Next to select - 2. Edit Files > Enter

Type Capital **F** > Enter> Sign Shows **Page 001**, Jumps to blank screen, Press **F1**> Press **F...**, **F...**, **F...** until you get **SS16** > Enter> Sign jumps to blank screen> Type **BIG FONT** > Press Enter > Save (Y/N)? Press Y to Save > Esc, Esc... until sign plays.

Using Remote Control, Press Menu Key Use Prev or Next to select - 1. Edit Run Sequence > Enter > Press DEL, DEL... to clear screen...

Type Capital **F** > Enter> Save (Y/N)? Press Y to Save> Esc, Esc... until sign plays.

---Your Sign will Play & Repeat the word BIG FONT.

#### **Step 5:**

Using Remote Control, Press Menu Key > Use Prev or Next to select - 1. Edit Run Sequence > Enter > Press DEL, DEL... to clear screen...

Type Capital **SNQAF** > Enter> Save (Y/N)? Press Y to Save> Esc, Esc... until sign plays.

---Your Sign will Play & Repeat Sign Size, Web Address, Your Name, Thank you Message, Your Full Address, BIG FONT.

Well Done! You have just programmed your first LED sign.

#### **How to create a New File?**

Using Remote Control, Press Menu Key > Use Prev or Next to select - 2. Edit Files > Enter

You will see ->FILE : % on your Screen, Press 1 to create file named 1. Press Enter.

You will now see > arrow on your screen, Press F1 to Program the Font, Color, Pause Time & Action:

Press **F** repeatedly to select the Font.

Press **C** repeatedly to select the Color.

Press **P** and type number between 0 & 5 repeatedly to select the Pause and press Enter.

Press **A** repeatedly to select the Action and Press Enter twice.

Type **WELCOME** and Press Enter Save (Y/N)? Press Y to Save and Press **Esc only once**.

Use Prev or Next to select - 1. Edit Run Sequence > Enter > Press DEL, DEL... to clear screen.

Type 1 and select Enter. Save (Y/N)? Press Y to Save > Esc, Esc... until sign plays.

### **How to create a New Page in an existing File?**

Using Remote Control, Press Menu Key > Use Prev or Next to select - 2. Edit Files > Type **1**. Press Enter twice.

Press **Next** on your remote to Create New Page (Y/N)? Press Y. Press F1 to Program the Font, Color, Pause time & Action:

Press **F** repeatedly to select the Font.

Press **C** repeatedly to select the Color.

Press **P** and type number between 0 & 5 repeatedly to select the Pause and press Enter.

Press **A** repeatedly to select the Action and Press Enter twice.


Type **IT WORKS** and Press Enter Save (Y/N)? Press Y to save Esc, Esc... until sign plays.

Now you have created a file with two pages.

### **How to delete a Page from an existing File?**

Using Remote Control, Press Menu Key > Use Prev or Next to select - 2. Edit Files > Press Enter, Type 1:

Your Screen will read as:

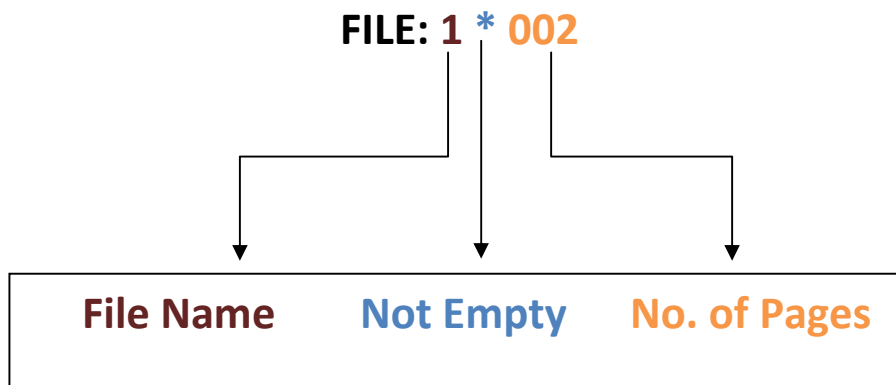

Press Enter to Select Page Number, Prev/Next to change Page.

Select 002 and Press Enter.

Press F4 -> **D** to Delete the Page 002. Press Esc, Esc... until sign plays.

This time you will only see the First Page 001 to Play i.e WELCOME message.